

ENGLISH

NB-9

WIRELESS SPORT HEADSET

User Manual

VIOTEK

For more information, please visit
www.viotekusa.com

or email a request to:
support@viotekusa.com

Support Line: 1-855-229-9472

IMPORTANT SAFETY INFORMATION

Please read the warnings below before using your headset. To ensure your own safety, observe all warnings while using your headset.

WARNINGS

- Do not disassemble or attempt to repair the headset
- Always include this User Manual when passing the headset to a third party
- Do not use the headset if any sort of defect or damage is found
- Do not listen at high volume for extended periods of time as this may cause hearing damage
- Always maintain a distance of 4" (10cm) between the ear cups and any cardiac pacemaker or implanted defibrillator as the headset generates permanent magnetic fields
- Keep the headset, its packaging, and any of its related parts or accessories out of reach of children and pets to prevent accidental consumption or damage
- Do not expose the headset to moisture
- Do not expose the headset to extreme temperatures (e.g. blow-dryers, heaters, extended periods under direct sunlight, etc.) as this may cause corrosion or deformation
- Clean the headset with soft, dry cloth only
- When not in use, power off the headset to conserve battery power.

Intended Use: The NB-9 Noise Isolating Headset is designed to work with mobile phones and/or Bluetooth®-compliant devices and allows for wireless streaming and phone calls.

Improper Use: Using the headset other than as described in this User Manual and/or under operating conditions other than those described in this User Manual.



This icon denotes warnings throughout the rest of the manual. For your safety, please read and follow any information or instruction adjacent to this icon. We shall not be held responsible for injury or damage of persons or products due to ignoring aforementioned warnings or warnings marked by this icon.

SAFETY INSTRUCTIONS

The NB-9 contains a lithium-ion battery pack. As with all battery packs and/or batteries, if misused or damaged, the pack or unit may leak. In extreme cases, the pack or unit may explode, generate unsafe heat or fire, produce smoke or gas, or otherwise present a fire hazard.



Do not puncture, damage, contaminate, crush, or otherwise tamper with the battery pack or unit. We shall not be held responsible for damage of persons or products due to misuse.

HEADSET SPECIFICATIONS

Features

Bluetooth® V4.1 with 32ft (9.6m) range
NFC Capability
Multipoint Connectivity
CVC6.0 Intelligent Noise Isolation

Headset

Net Weight: 166g (0.37lbs.)
Dimensions: 7" x 6.5" x 3" (unfolded)

Package Contents

One Headset
One Headset Case
One Charger Cable
One User Manual
One 3.5mm AUX Audio Cable
One Micro USB charging cable

Controls

Power button
Answer/Call end/Play/Pause button
Next/Previous track button
Volume Up/Down button

 
Battery

Up to 180 days standby time
Up to 60 hours talk time
Up to 45 hours audio playback time
Built-in 3.7V, 800mAh Lithium-Ion battery
DC 5V Charging voltage
Approximate 3 HR charging time

Audio Elements

Stereo
Speaker type: 40mm 32Ω 30mW
Ear Coupling: Cover
Driver size: 40mm
Speaker Frequency: 20Hz-20000Hz
Sensitivity: -42dB
Microphone: 4mm ECM

HEADSET DIAGRAM AND HOW TO USE HEADSET

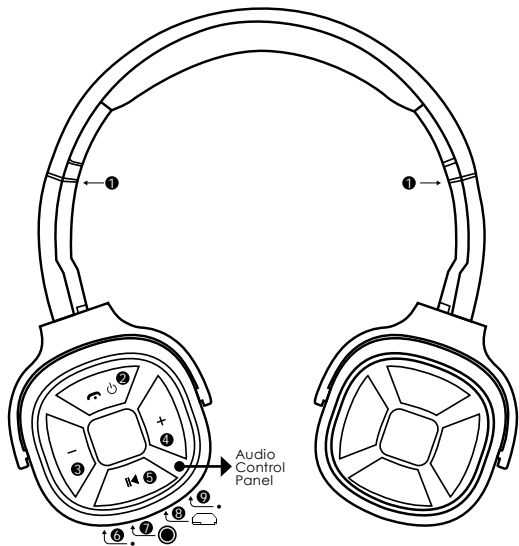

DIAGRAM

- 1.Adjustable Headband
- 2.On/Off/Answer/Stop
- 3.Volume down/Previous track
- 4.Volume up/Next track
- 5.Play/Pause
- 6.Microphone
- 7.AUX Audio Port
- 8.Micro USB Charging Port
- 9.LED Indicator

Adjusting the Headband

For optimal sound and comfort, the headband may need to be adjusted.

1. Put on the headset so that the headband is situated over the top of your head.
2. Adjust the length of the headband equally on both sides so that:
 - The ear pads rest comfortably against both of your ears
 - You feel an even, gentle pressure around your ears
 - The headband fits snugly on your head



Transmitted radio waves from mobile phones may impair or effect the operation of sensitive and unprotected devices. Only use the headset in an environment where wireless Bluetooth® transmission is permitted.

Connecting to an Audio Source

The NB-9 Headset which uses Bluetooth® 4.1. To enter pairing mode, perform a long press on the power button. The LED Indicator will flash blue and red alternatively once pairing mode is activated.

- While in pairing mode, note the following details apply:
- If prompted, enter the PIN. By default, it is "0000". The headset will offer a voice prompt to confirm a successful pairing.
- Long press the "+" button to increase volume. Long press the "-" button to decrease volume.
- If the device has been paired to the headset before, long press the headset's power button for at least 3 seconds to turn it on and the two will reconnect automatically.



When adjusting the volume, the sound will gradually raise. If the volume does not seem to change, listen for a few seconds, the sound may be adjusting more slowly than you realized.

Connecting Two Devices

After pairing to one device, long press the power button until the LED Indicator flashes blue and red alternatively to indicate pairing mode is active. Next, turn on Bluetooth® or NFC respectively to pair to a second device. The NB-9 can remember up to two devices.

Disconnecting

To disconnect, power off the headset completely or press the power button once. Pressing once will allow the headset to stay on. The headset will offer a voice prompt to confirm a successful disconnection. If the headset remains powered on and does not reconnect with a device, the headset will turn off automatically.



Listening at high volume for extended periods of time may cause hearing damage. Set the volume to a low level and adjust only after putting on the headset. Do not continuously expose your ears to high volume.

NFC Connect Mode

To use an NFC connection, follow the steps below.

1. When connecting for the first time, long press the power button. The LED Indicator will flash blue and red alternatively once pairing mode is activated.
2. Turn on the NFC function within the device you wish to pair with the headset
3. Hold the device close to the headset's left earphone
4. The device and headset will pair automatically

After successfully paired, turn on the headset. The NFC connection will restart automatically.

Using the AUX Audio Cable

The NB-9 comes with an AUX audio cable to allow you to continue enjoying music in case the headset runs out of power and/or you are unable to charge it right away. To use the cable, insert the appropriate end into the headset and the other into your mobile phone or audio device. The LED Indicator will turn red to indicate AUX mode is active. Use the volume controls on the mobile phone or audio device to adjust as desired.

Managing Calls

When connected to a mobile phone, the headset will offer a voice prompt to alert you to incoming calls and call endings. Press the answer call/end button to answer or hang up. To redial the last dialed number, double click the phone button.

Powering Off the Headset

When not in use, power off the headset to conserve battery power.

1. Press and hold the power button until the LED Indicator flashes red twice.
2. Listen for a descending sound to confirm that the Bluetooth® connection is deactivating and the headset is otherwise powering off.

Charging the Headset

If the headset is powered on and does not reconnect with a device, the headset will turn off automatically. When the headset offers a voice prompt specifying

“low voltage”, recharge it. To use the charging cable, insert the appropriate end into the headset and the other end into a computer or USB outlet. The LED Indicator will turn red to indicate the headset is charging. When the headset is fully recharged, it will turn off automatically. You may then disconnect from the charger.



USB charging cable can only be used for charging purposes. It is not possible to use it to connect to audio devices and/or for audio playback. If you wish to use a wired connection, please use the AUX audio cable.

Switch Language Mode

Voice prompts may be switched to another language for your convenience. Prompts are available in English, Chinese, Spanish, and French. To switch, press the Volume Up and Volume Down buttons simultaneously. Press both buttons once again to switch to the next language.

HOW TO USE THE “SMART WEAR” APP

Downloading the App

Using a mobile phone or device with an Android OS, scan the QR code below and download the “Smart Wear” App. Please note the Smart Wear app is only available from the Google Play Store and therefore must be downloaded on a mobile phone using an Android OS. iOS is not supported.

 


Once downloaded and installed, use the app to connect to the headset. The headset will synchronize data with the app.




If the app is open and/or running in the background, the headset will prompt your phone to sound an alarm if Bluetooth® is unexpectedly disconnected, if the headset loses power, or if the phone and headset are moved more than 32ft. (9.6m) from one another.


After pairing the headset to a mobile phone, open the app and tap "Step Earphone" to enter its coordinating interface.

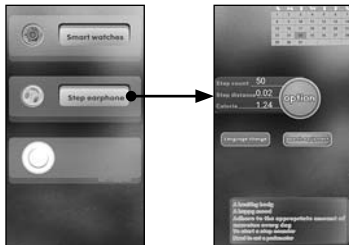

 Tap "Search Equipment" and a prompt will appear to show information regarding a successful connecting between the headset and mobile phone.

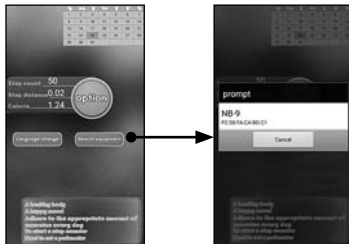

 
Tap "Option" to enter its coordinating interface. Tap "Step Length" and "Weight" to add in information as desired. To complete the setup, tap "Complete Set". The app will now keep track of the number of steps you take.

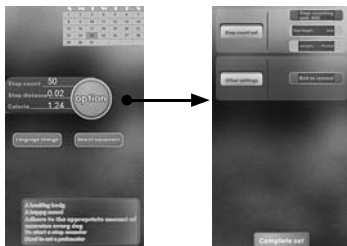

Within the options interface, tap "Bolt to Remind" if desired. This feature will prompt the phone to sound an alarm if a disconnection issue arises.



 From the main screen, tap on a calendar date to see the related pedometer record for the selected date.

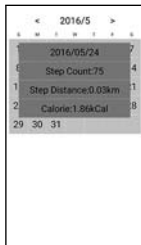

1 Year Limited Hardware Warranty

Viotek Inc. (Viotek) offers a ONE YEAR limited warranty covering the hardware of Viotek Wireless Sport Headset (“Product”), limited to those residing in the 50 US States and Canada. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Viotek warrants the Product to be free from defects in materials and workmanship under normal use for one (1) year, as sold to the original purchaser, from the date of retail purchase by the original end-user purchaser. If a hardware defect arises and a valid claim is received within the warranty period, at its option and to the extent permitted by law, Viotek will: (1) repair the hardware defect by using new or refurbished parts that are equivalent to new in performance and reliability; or (2) exchange the product with a product that is new or refurbished, that is substantially equivalent to the original product. This warranty is for replacement for like-items only and does not cover items out of production if the company no longer stocks them. This warranty is not assignable or transferable. The original purchaser may call the Viotek toll-free number at 1-855-229-9472 for service request.

Upon Viotek’s replacement or repair of a Product under warranty, the original end-user purchaser will have the remaining warranty under the original warranty period (without any postponement during repair or replacement). When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Viotek’s property. Important: Do not disassemble the Product. Disassembling the Product will void this warranty. Only Viotek or a party expressly authorized by Viotek should perform service on this Product.

This warranty only covers technical hardware defectiveness during the warranty period and under normal use conditions. Viotek does not warrant uninterrupted or error-free operation of this Product. This Warranty does not apply to damages or circumstances, such as, but not limited to:

- (a) Damage that is caused by conditions, malfunctions, or damage not resulting in from defects in material or workmanship. These conditions include, but are not limited to, accidents, and improper operation or maintenance;
- (b) Product has been tampered with, repaired and/or modified by non-authorized personnel;
- (c) Obsolescence;

- (d) Damage (accidental or other) to the Product that is cosmetic, meaning damage that does not impact the operation and functioning of the Product, such as without limitation to rust, change in color, texture or finish, wear and tear, scrapes, scratches, dents, cracks, or gradual deterioration;
- (e) Damage to the Product caused by war, terrorism, fire, accident, natural disaster, intentional or accidental misuse, abuse, neglect or improper maintenance, use under abnormal conditions, accidental drops, abuse or fire;
- (f) Damage to the Product caused by an external electrical fault, surge, or any electrical anomaly;
- (g) Any contamination, condition or other circumstance, which Viotek, in its sole discretion, considers a danger to health and safety, including, but not limited to any contact between the Product and a biohazard, bodily fluids, infectious materials/substance, chemicals, hazardous substances, diseases, radiation, or other;
- (h) Fraud, theft, misplacement, unexplained disappearance, or willful acts.

DISCLAIMER OF WARRANTY

TO THE EXTENT PERMITTED BY LAW, THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. AS PERMITTED BY APPLICABLE LAW, VIOTEK SPECIFICALLY DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF VIOTEK CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPAIR OR REPLACEMENT SERVICE AS DETERMINED BY VIOTEK IN ITS SOLE DISCRETION. NO RESELLER, AGENT, OR EMPLOYEE IS AUTHORIZED TO MAKE ANY

MODIFICATION, EXTENSION, OR ADDITION TO THIS WARRANTY. IF ANY TERM(S) IS HELD ILLEGAL OR UNENFORCEABLE, THE LEGALITY AND ENFORCEABILITY OF THE REMAINING TERMS SHALL NOT BE AFFECTED OR IMPAIRED.

EXCEPT AS PROVIDED IN THIS WARRANTY AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, VIOTEK IS NOT RESPONSIBLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION OR PERFORMANCE OF THE PRODUCT, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOSS OF USE; LOSS OF REVENUE; LOSS OF ACTUAL OR ANTICIPATED PROFITS (INCLUDING LOSS OF PROFITS ON CONTRACTS); LOSS OF THE USE OF MONEY; LOSS OF ANTICIPATED SAVINGS; LOSS OF BUSINESS; LOSS OF OPPORTUNITY; LOSS OF GOODWILL; LOSS OF REPUTATION; LOSS OF, DAMAGE TO, COMPROMISE, OR CORRUPTION OF DATA; OR ANY INDIRECT OR CONSEQUENTIAL LOSS OR DAMAGE HOWSOEVER CAUSED INCLUDING THE REPLACEMENT OF EQUIPMENT AND PROPERTY, ANY COSTS OF RECOVERING, PROGRAMMING OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH THE PRODUCT AND ANY FAILURE TO MAINTAIN THE CONFIDENTIALITY OF DATA STORED ON THE PRODUCT. THE FOREGOING LIMITATION SHALL NOT APPLY TO DEATH OR PERSONAL INJURY CLAIMS, OR ANY STATUTORY LIABILITY FOR INTENTIONAL AND GROSS NEGLIGENT ACTS AND/OR OMISSIONS. VIOTEK DISCLAIMS ANY REPRESENTATION THAT IT WILL BE ABLE TO REPAIR ANY PRODUCT UNDER THIS WARRANTY OR MAKE A PRODUCT EXCHANGE, AND IS UNABLE TO RECOVER ANY USER SOFTWARE OR DATA ON THE DEVICE.

DECLARATION OF CONFORMITY

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Federal Communications Commission Notice

“Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.”

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- + Reorient or relocate the receiving antenna.
- + Increase the separation between the equipment and receiver.
- + Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- + Consult the dealer or an experienced radio/TV technician for help.

VIOTEK

viotekusa.com